










 



 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	FAV		Fav / Marker / PC

**Originalfernbedienung    Ersatzfernbedienung**

	Vol+		Vol+
	MTS / I / II		Audio / Lang I / II
	CH+		CH+ / Page+
	Vol-		Vol-
	Sub-T		Subtitle / EQ
	CH-		CH- / Page-
	SET		Smart / List
	Home		D.Menu / Top
	Mouse		Info / Angle
	Source		AV / Input / RDS
	Up		Up
	Display		Display / Media
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down



