



 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Select		Ok
	Menu		Menu
	[i]/Info		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	PP		Pre Ch
	-/--		Shift + Guide
	P<P		Back
	CH-		Ch -
	CH+		Ch +
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	I-II		Dual
	DTV/TV		TV/R
	AV		AV
	Red/Sound/▲		Red
	Green/Picture/▼		Green
	Yellow/Feature		Yellow
	Blue/Install		Blue
	[≡]/Text		Text





Originalfernbedienung Ersatzfernbedienung

	[≡o]		Subt
	[≡+]		Options
	[≡x]/[□□]		Exit
	[*]		Smart
	[+]/Wide/[≡♦]		3D
	[≡?]/PC		Media
	[≡i]/Guide		Guide
	Subtitle		Sleep
	Lang		Eject
	Screen		Format
	FAV		Shift + Pre Ch

Originalfernbedienung Ersatzfernbedienung

