
 

 









 








 

 






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	AV		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Back
	Zoom		Eject
	PIC		Format

**Originalfernbedienung    Ersatzfernbedienung**

	Balance		Subt
	Disp		Info
	P.P		Pre Ch
	Woof		Smart
	P+		Ch +
	P-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Audio		Dual
	SYS		Media

