































































 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	USB		Shift + 8
	Sleep		Sleep / Timer
	Tv/R		TV/Radio /
	Tv/SAT		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide / EPG / -/-







 
Originalfernbedienung Ersatzfernbedienung

	Info		Info / Angle
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up/CH+		Up
	Down/CH-		Down
	Vol-		Vol-
	Left		Left
	Right		Right
	Vol+		Vol+
	OK		OK
	Page Up		CH+ / Page+
	Page Down		CH- / Page-
	FAV		Fav / Marker / PC
	Recall		Back / Return
	SAT		Shift + 0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Open/Close		Eject / Surround
	[...]		Subtitle / EQ
	[=]		Text / Goto
	Pause		Pause / Step / Freeze
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

