



 


 



 
 





 



 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red / Reset		Red
	Green / TXT		Green
	Green / TXT		Text
	Yellow		Yellow
	Blue / Panel		Blue
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	FAV		Pre Ch
	Freeze		Smart

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	TV/R		TV/R
	Menu		Menu
	Exit		Exit
	Up / CH+		Up
	Left / Vol-		Left
	OK		Ok
	Right / Vol+		Right
	Down / CH-		Down
	SAT		Media
	Back		Back
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	INF		Info
	EPG		Guide





Originalfernbedienung Ersatzfernbedienung

1 **#	1	1	1
2 ABC	2	2	2
3 DEF	3	3	3
4 GHI	4	4	4
5 JKL	5	5	5
6 MNO	6	6	6
7 PQRS	7	7	7
8 TUV	8	8	8
9 WXYZ	9	9	9
0 ---	0	0	0
Func 1	Func 1	SETTINGS OPT	Options
Stream	Stream	ECO 3D	3D

Originalfernbedienung Ersatzfernbedienung

