 


 

 
 

 

 

 




 






 
 



 





**Originalfernbedienung    Ersatzfernbedienung**

|   |           |   |               |
|---|-----------|---|---------------|
|    | Power     |    | Power         |
|    | [i]/Info  |    | Info          |
|    | Mute      |    | Mute          |
|    | I-II      |    | Dual          |
|    | OK/Select |    | Ok            |
|    | 1         |    | 1             |
|    | 2         |    | 2             |
|    | 3         |    | 3             |
|    | 4         |    | 4             |
|    | 5         |    | 5             |
|    | 6         |    | 6             |
|   | 7         |   | 7             |
|  | 8         |    | 8             |
|  | 9         |    | 9             |
|  | 0         |    | 0             |
|  | -/-/+10   |  +  | Shift + Guide |
|  | Exit      |    | Exit          |

**Originalfernbedienung    Ersatzfernbedienung**

|   |                  |   |        |
|---|------------------|---|--------|
|    | Menu             |    | Menu   |
|    | Red/↑/Return     |    | Red    |
|    | Green/↓/Subtitle |    | Green  |
|    | Yellow/Audio     |    | Yellow |
|    | Blue/Angle       |    | Blue   |
|    | Up               |    | Up     |
|    | Down             |    | Down   |
|    | Right            |    | Right  |
|    | Left             |    | Left   |
|    | P+               |    | Ch +   |
|    | P-               |    | Ch -   |
|   | Vol+             |   | Vol +  |
|  | Vol-             |  | Vol -  |
|  | Play             |  | Play   |
|  | Pause            |  | Pause  |
|  | Stop             |  | Stop   |
|  | <<               |  | <<     |





Originalfernbedienung Ersatzfernbedienung

 
 


 
 
|   |               |   |                |
|---|---------------|---|----------------|
|    | >>            |    | >>             |
|    | [TV]          |    | TV/R           |
|    | D-Menu        |    | Smart          |
|    | TV            |    | Media          |
|    | AV            |    | AV             |
|    | P<P           |    | Pre Ch         |
|    | PP            |    | D. Menu        |
|    | [≡]           |    | Text           |
|    | [≡o]          |    | Subt           |
|    | [≡+]          |    | Format         |
|   | [≡x]          |   | 3D             |
|  | [≡♦]/Wide     |  | Shift + Format |
|  | [≡?]          |  | Options        |
|  | [≡i]/Guide    |  | Guide          |
|  | [::]/Subtitle |  | Back           |
|   |               |   |                |
|   |               |   |                |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |




**Originalfernbedienung Ersatzfernbedienung**

|   |                  |   |                |
|---|------------------|---|----------------|
|    | Power            |    | Power          |
|    | 1                |    | 1              |
|    | 2                |    | 2              |
|    | 3                |    | 3              |
|    | 4                |    | 4              |
|    | 5                |    | 5              |
|    | 6                |    | 6              |
|    | 7                |    | 7              |
|    | 8                |    | 8              |
|    | 9                |    | 9              |
|    | 0                |    | 0              |
|   | -/-/+10          |   | Guide          |
|  | Exit             |  | Exit           |
|  | Red/↑/Return     |  | Red            |
|  | Green/↓/Subtitle |  | Green          |
|  | Yellow/Audio     |  | Shift + Yellow |
|  | Blue/Angle       |  | Blue           |

**Originalfernbedienung Ersatzfernbedienung**

|   |             |   |               |
|---|-------------|---|---------------|
|    | Stop        |    | Stop          |
|    | Play        |    | Play          |
|    | Pause       |    | Pause         |
|    | D-Menu      |    | Smart         |
|    | <<          |    | <<            |
|    | >>          |    | >>            |
|    | l<<         |    | l<<           |
|    | >>l         |    | >>l           |
|    | Time        |    | Shift + AV    |
|    | Zoom        |    | Shift + Eject |
|    | Program     |    | Sleep         |
|   | Search Mode |   | AV            |
|  | Repeat      |  | Text          |
|  | A-B         |  | Shift + Play  |
|  | C           |  | Yellow        |
|  | Title       |  | Info          |
|  | Display     |  | Shift + Info  |





**Originalfernbedienung Ersatzfernbedienung**

|  |            |  |       |
|--|------------|--|-------|
|  | Open/Close |  | Eject |
|  | Menu       |  | Menu  |
|  | Select     |  | Ok    |
|  | Up         |  | Up    |
|  | Down       |  | Down  |
|  | Left       |  | Left  |
|  | Right      |  | Right |
|  | Vol+       |  | Vol + |
|  | Vol-       |  | Vol - |
|  | Mute       |  | Mute  |
|  |            |  |       |
|  |            |  |       |
|  |            |  |       |
|  |            |  |       |
|  |            |  |       |
|  |            |  |       |
|  |            |  |       |
|  |            |  |       |
|  |            |  |       |
|  |            |  |       |
|  |            |  |       |
|  |            |  |       |

**Originalfernbedienung Ersatzfernbedienung**

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

