
 



 


 
 
 
 

 
 
 
 










 

 
 


 


 




 
 
 





 
 





 

 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		Smart	
Reveal		Format	
Txt Stop		Stop	
Subt.List		Subt	
Sleep Timer		Sleep	
Return TV		TV/R	
Info		Info	
Menu video		D. Menu	
Text		Text	
Txt Expand		Eject	
TV/AV		AV	
Menu		Menu	
Display	 +  Shift + Info		
Menu Up		Up	
Menu Down		Down	
Menu Right		Right	
Menu Left		Left	
OK Enter		Ok	
Menu Off		Exit	
Back		Back	
Volume+		Vol +	
Volume-		Vol -	
Chan.Up		Ch +	
Chan.Down		Ch -	
Menu audio		Dual	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung Ersatzfernbedienung

8		8
9		9
0/10		0
Guide +/- 1.		Guide
2.Fav P/C 2.		Pre Ch
Red		Red
Tone-		I<<
Tone+		>>I
Audio-		<<
Color- S.Std		List
Audio+		>>
Green		Green
Yellow		Yellow
Blue		Blue
On/Tim		Shift + Subt
Game Coo		Shift + Eject
Browse		Shift + Back

Originalfernbedienung Ersatzfernbedienung

Contrast+		Shift + Ch +
Contrast-		Shift + Ch -
Swap		Media
Surround		Shift + Red
On Pip		3D
Nicam/Mono		Shift + Green
Level L		Shift + Yellow
Level R/Woofer		Shift + Blue

