


 



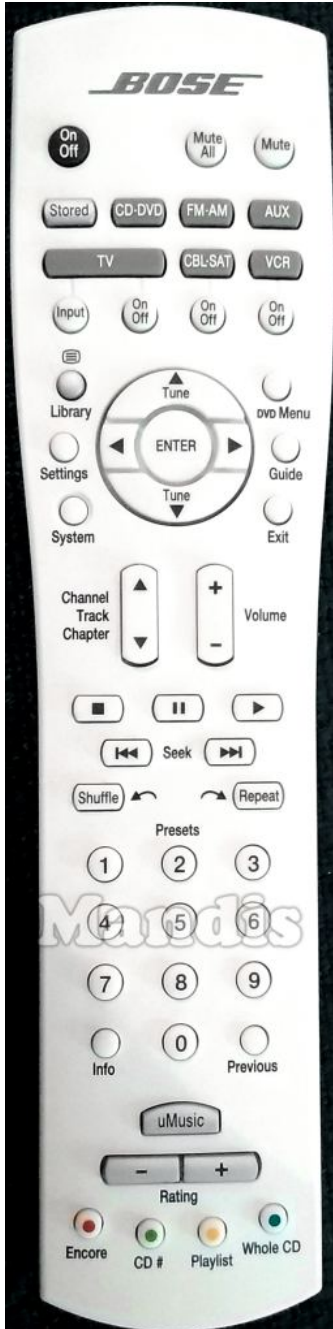 
Originalfernbedienung Ersatzfernbedienung

	On / Off		Power
	Mute All		Shift + Mute / Dimmer
	Mute		Mute / Dimmer
	Stored		Smart / List
	CD - DVD		Shift + 2
	FM - AM		Shift + TV/Radio / Program
	AUX		Shift + 7
	TV		TV/Radio /
	CBL - SAT		Eject / Surround
	VCR		Shift + 4
	Library		Shift + Display / Media
	Up / Tune +		Up
	DVD Menu		D.Menu / Top
	Settings		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide / EPG / -/-
	System		Text / Goto
	Down / Tune -		Down
	Exit		Exit / Cancel / Clear
	Track/Chap./CH +		CH+ / Page+
	Volume +		Vol+
	Track/Chap./CH -		CH- / Page-
	Volume -		Vol-
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<< Seek		I<< / Preset-
	>>I Seek		>>I / Preset+
	Shuffle		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	1		1
	2		2





Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	Previous		Back / Return
	uMusic		Shift + Smart / List
	Rating-		Shift + Down
	Rating+		Shift + Up
	Encore		Menu / Home
	CD #		Fav / Marker / PC
	Playlist		Display / Media
	Whole CD		Shift + 3

Originalfernbedienung Ersatzfernbedienung

