

 
 










Originalfernbedienung Ersatzfernbedienung

	Tv/Radio		TV/Radio /
	Power		Power
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Media		Display / Media
	Lang.		Audio / Lang I/II
	SUB		Subtitle / EQ
	Guide		Guide / EPG / -/--
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	FAV.		Fav / Marker / PC
	Down		Down
	X/Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	i		Info / Angle
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow/Timer		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	TTX		Text / Goto
	0		0
	CH Back		Back / Return

Originalfernbedienung Ersatzfernbedienung

