







 

 







 

 

 



 




 




 

 



 

 







 



 

 













Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Swap		Setup / OPT /
	0		0
	AV		AV / Input / RDS
	[ ]		Shift + 1
	♪		Sound / Title
	[<>]		Picture / Format

Originalfernbedienung Ersatzfernbedienung

	[i]		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Text		Text / Goto
	Menu		Menu / Home
	CH+		CH+ / Page+
	Vol-		Vol-
	Back		Back / Return
	Tv/Exit		TV/Radio /





**Originalfernbedienung**    **Ersatzfernbedienung**

	CH-		CH- / Page-
	FAV		Fav / Marker / PC
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Guide		Guide / EPG / -/--
	[?]		Shift + Info / Angle
	[≡x]		Shift + 5
	[:≡]		Shift + 4
	[↕]		Shift + 3
	[↕]		Shift + 2
	PIP Pos		D.Menu / Top
	PIP Size		Zoom / Size
	PIP		Eject / Surround

**Originalfernbedienung**    **Ersatzfernbedienung**