
 










 

 
 
 
 
 
 

 
 



 
 
 


 

 
 

 
 



 


 






 

 
 
 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Smart	Menu Off	 Exit
Reveal	 Media	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Menu audio	 Dual
Return TV	 TV/R	Volume-	 Vol -
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 +  Shift + Info	6	 6
Menu Left	 Left	7	 7



Originalfernbedienung	Ersatzfernbedienung		Originalfernbedienung	Ersatzfernbedienung	
8		8			
9		9			
Guide -/-- 1.		Guide			
0/10		0			
2.Fav P/C 2.		Pre Ch			
Red		Red			
Green		Green			
Yellow		Yellow			
Tone+		Options			
Blue		Blue			
Audio+		3D			
On Pip	 + 	Shift + 1			
Swap	 + 	Shift + 2			
Rotate Pip	 + 	Shift + 3			
Still	 + 	Shift + 4			
Dim Pip	 + 	Shift + 5			

