




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Source		AV / Input / RDS
	I/II/Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Menu / Home
	Menu		Info / Angle
	Info		Exit / Cancel / Clear
	Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Jump		Display / Media
	FAV.CH		Fav / Marker / PC
	OK		OK
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Vol+		Vol+
	Vol-		Vol-
	PR-		CH- / Page-
	PR+		CH+ / Page+
	Red/D.Setup		Red / Netflix / Search
	Green/Repeat		Green / APP / Repeat
	Yellow/Zoom		Yellow / YouTube / Repeat
	Blue/Goto		Blue / Prime Video / Random
	[=+]/DTV/Radio		TV/Radio /



