























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide / EPG / -/--
	Recall		Back / Return
	Vol+		Vol+
	Nicam		Shift + Sound / Title
	Display		Display / Media

Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	ATV_Menu		Menu / Home
	Down		Down
	DVB_Menu		D.Menu / Top
	AV/TV		AV / Input / RDS
	PMode		Picture / Format
	SMode		Sound / Title
	Sleep		Sleep / Timer
	Text		Text / Goto
	Hold		Stop / Hold
	Page+		Shift + CH+ / Page+



