



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Zoom		Zoom / Size
	Open/Close		Eject / Surround
	Mute		Mute / Dimmer
	Preview/Intro		Back / Return
	Dolby		Audio / Lang / I/I
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	ALT/Title/PBC		Sound / Title
	0/10		0

**Originalfernbedienung    Ersatzfernbedienung**

	10+		Shift + Guide / EPG / -/--
	Menu/Setup		Menu / Home
	Exit/Return		Exit / Cancel / Clear
	Sub./Subtitle		Subtitle / EQ
	Up		Up
	CH+		CH+ / Page+
	Right		Right
	Left		Left
	Enter		OK
	Play		Play / Slow
	CH-		CH- / Page-
	Down		Down
	Blue/Text/Menu		Blue / Prime Video / Random
	Green/Audio		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Pause		Pause / Step / Freeze
	Red/Language		Red / Netflix / Search





 

 





**Originalfernbedienung    Ersatzfernbedienung**

	List/Angle		Smart / List
	Info/Display		Info / Angle
	DVD/DVB/Functio		Display / Media
	Vol+		Vol+
	Tv/Radio		TV/Radio /
	Game		Picture / Format
	Vol-		Vol-
	Favor.		Fav / Marker / PC
	Auto Scan		AV / Input / RDS
	Stop		Stop / Hold
	Slow		Shift + Play /
	EPG/Program		Guide / EPG / -/--
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Clear		Shift + Exit / Cancel / Clear
	<<		<< / Tune-
	>>		>> / Tune+

**Originalfernbedienung    Ersatzfernbedienung**

	Memory		D.Menu / Top
	Repeat		Shift + Green / APP /
	A-B		Shift + Yellow / YouTube /
	A-Time		Setup / OPT /

