 





 







 























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	TTX		Text / Goto
	4		4
	5		5
	6		6
	Subtitle		Subtitle / EQ
	7		7
	8		8
	9		9
	Info		Info / Angle
	0/10		0
	Goto		Shift + Text /
	FAV		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	EPG		Guide / EPG / -/-
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Audio		Audio / Lang I/II
	CH+		CH+ / Page+
	Up		Up
	Tv/Radio		TV/Radio /
	Left		Left
	Enter		OK
	Right		Right
	Zoom		Zoom / Size
	Down		Down
	CH-		CH- / Page-
	Tv/VCR		AV / Input / RDS
	Play		Play / Slow





Originalfernbedienung **Ersatzfernbedienung**

	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Menu		Menu / Home
	Rec		Rec / Rec Mode
	PVR List		Smart / List
	Exit		Exit / Cancel / Clear
	Recall		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol-		Vol-
	Vol+		Vol+

Originalfernbedienung **Ersatzfernbedienung**

