 

 
 
 

 

 



 

 

 

 
 








 

 



 
 

 
 



Originalfernbedienung Ersatzfernbedienung

 
 
 

 

 

 

 
 
 

 

 

 

 
 


 

 
 
 
 


	Power		Power
	Mute		Mute
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu
	Input		AV
	Exit		Exit
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Hold/EPG		Options
	Index/CH.List		List

Originalfernbedienung Ersatzfernbedienung

	Size/Fav List		Format
	Subpage/Play List		Eject
	Red/Record		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Energy		Guide
	Picture		Shift + Format
	Sound		Dual
	Audio		3D
	[...]/Subtitle		Subt
	16:9/4:3		D. Menu
	Sleep		Sleep
	TTX		Text
	Recall/Repeat		Back
	1		1
	2		2





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Play		Play
	Stop		Stop
	<</REV		<<
	>>/FF		>>
	Pause		Pause
	→		TV/R
	I<<		I<<
	>>I		>>I

