
 

 





 



 
 


 
 


 
 

 

 


 
 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	OK		Ok
	Up		Up
	CH+		Ch +

 

 

 
 
 
 


 
 
 
 
 
 
 

 

 
Originalfernbedienung Ersatzfernbedienung

	Down		Down
	CH-		Ch -
	Vol+		Vol +
	Right		Right
	Left		Left
	Vol-		Vol -
	EPG		Guide
	Red		Red
	Subtitle		Subt
	Yellow		Yellow
	Green		Green
	Audio		Dual
	Text		Text
	Blue		Blue
	i		Info
	FAV		Pre Ch
	Digest		List





**Originalfernbedienung**   **Ersatzfernbedienung**

	Rec		Rec
	Stop		Stop
	TV/Radio		TV/R
	Roll		Eject
	Zoom		Shift + Eject
	Device		D. Menu
	Play/Pause		Play
	<<		<<
	>>		>>
	Prev		Sleep
	Next		Back

**Originalfernbedienung**   **Ersatzfernbedienung**