



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Picture	 + 	Shift + Format
	Sound		Dual
	Input		AV
	Menu		Menu
	Exit		Exit
	16:9/4:3		Format
	Info		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	FAV		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Recall		Back
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Subtitle		Subt
	Audio	 + 	Shift + Dual
	Goto		Smart
	Repeat	 + 	Shift + Text





**Originalfernbedienung    Ersatzfernbedienung**

	CH List		List
	Playlist		Shift + Play
	EPG		Guide
	Play		Play
	ECO/TFT Off		3D
	Pause/TS		Pause
	Record		Rec
	Stop		Stop
	<<		<<
	>>		>>
	<<		<<
	>>		>>
	TV/TXT		Text
	Hold		Options
	Subpage		TV/R
	Size		Eject
	Red		Red

**Originalfernbedienung    Ersatzfernbedienung**

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Sleep		Sleep

