

 

 

 
 
 



 

 















 

 




 

 

 



 

















 



 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Screen	 + 	Shift + Format
	Screen		Smart
	Tv / AV		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-	 + 	Shift + Guide
	Return		Back

Originalfernbedienung Ersatzfernbedienung

	Open / Close		Eject
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	OK		Ok
	Tv-Menu		Menu
	Exit		Exit
	Info		Info



