
 


 























 


 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Display		Info
	Exit		Exit
	TV / AV		AV
	SYS		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide

Originalfernbedienung Ersatzfernbedienung

	Recall		Pre Ch
	V +		Vol +
	V -		Vol -
	P +		Ch +
	P -		Ch -
	Up		Up
	Left		Left
	Menu		Menu
	Menu		Ok
	Right		Right
	Down		Down
	SMode		Format
	PMode		Shift + Dual
	Sleep		Sleep
	Nicam		Dual
	Hold		Stop
	Index		Media





Originalfernbedienung Ersatzfernbedienung

PGUP	PGUP		Shift + Ch +
SIZE	Size		Eject
PGDN	PGDN		Shift + Ch -
TEXT	Text		Text
REVEAL	Reveal		Options
SUBPAGE	Subpage		Subt
RED	Red		Red
GREEN	Green		Green
YELLOW	Yellow		Yellow
BLUE	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

