






 
 
 

 

 

 









 



 

 














**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Display		Info
	Menu		Menu
	TV / AV		AV
	SYS		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide

**Originalfernbedienung Ersatzfernbedienung**

	Recall		Pre Ch
	V +		Vol +
	V -		Vol -
	P +		Ch +
	P -		Ch -
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	→ S ←		Dual
	P.P		Format
	Nicam		Shift + Dual
	Sleep		Sleep
	Hold		Stop
	Index		Media
	Size		Eject



