





































**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Display		Display / Media
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Menu		Menu / Home
	Music		Sound / Title
	Copy		Fav / Marker / PC
	Zoom		Zoom / Size
	TV System		TV/Radio /
	Browser		Info / Angle
	Vol-		Vol-
	Vol+		Vol+
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Up		Up
	Left		Left
	Enter		OK

**Originalfernbedienung    Ersatzfernbedienung**

	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Time Shift		Picture / Format
	0		0
	Goto		Text / Goto
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold



