





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject
	OSD		3D
	Subtitle		Subt
	Angle		Red
	Language		Dual
	L/R		Green
	N/P		Yellow
	Video SW		Smart
	Video/PScan		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

**Originalfernbedienung Ersatzfernbedienung**

	8		8
	9		9
	0		0
	10+		Guide
	Goto		Blue
	Step		Ch +
	Slow		Ch -
	PBC		Back
	Program		Sleep
	Repeat		Text
	A-B		Shift + Text
	Vol+		Vol +
	Vol-		Vol -
	Setup		Menu
	Zoom		Shift + Eject
	Title		Format
	Root		Pre Ch





**Originalfernbedienung Ersatzfernbedienung**

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Switch		Exit
	Mic+	+	Shift + Up
	Mic-	+	Shift + Down
	Random		Media
	Mute		Mute
	Pause		Pause
	Play		Play
	Stop		Stop
	<<		<<
	>>		>>
	<<		<<
	>>		>>

**Originalfernbedienung Ersatzfernbedienung**