




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv / Radio		TV/R
	← PR		Back
	EPG		Guide
	Menu		Menu
	Up / PR +		Up

Originalfernbedienung Ersatzfernbedienung

	Up / PR +		Ch +
	Down / PR -		Ch -
	Down / PR -		Down
	Right / Vol +		Vol +
	Right / Vol +		Right
	Left / Vol -		Vol -
	Left / Vol -		Left
	OK / List		Ok
	FAV		Pre Ch
	Exit		Exit
	Red / Find		Red
	Yellow / TXT/Subt.		Subt
	Yellow / TXT/Subt.		Text
	Yellow / TXT/Subt.		Yellow
	Green / V-Format		Green
	Blue / Audio L/R		Blue
	Blue / Audio L/R		Dual





Originalfernbedienung    Ersatzfernbedienung

	↑ / Page+	 + 	Shift + Up
	↓ / Page-	 + 	Shift + Down
	Pause		Pause
	Info		Info
	TV / AV		AV
	Sleep		Sleep
	SAT		Smart
	Record		Rec
	Play		Play
	Stop		Stop
	Shift		Media
	<< Fast		<<
	Fast >>		>>
	< Slow		l<<
	Slow >		>>l

Originalfernbedienung    Ersatzfernbedienung