 

 

 
 

 

 
 




 










**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Portal/Energy Saving		Sleep / Timer
	[ ]/Ratio		Picture / Format
	Input		AV / Input / RDS
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		D.Menu / Top

**Originalfernbedienung    Ersatzfernbedienung**

	Vol+		Vol+
	Fav		Fav / Marker / PC
	PR+/Page Up		CH+ / Page+
	Vol-		Vol-
	3D		Zoom / Size
	PR-/Page Down		CH- / Page-
	Mute		Mute / Dimmer
	Settings		Setup / OPT /
	Info/Home		Info / Angle
	Q.Menu/3D		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Guide		Guide / EPG / -/-





Originalfernbedienung Ersatzfernbedienung

<b>EXIT</b>	Exit	<b>CLEAR</b> EXIT CANCEL	Exit / Cancel / Clear
<b>REDF</b>	Red	<b>NETFLIX</b> SEARCH	Red / Netflix / Search
<b>GRN</b>	Green	<b>APP</b> REPEAT	Green / APP / Repeat
<b>YLF</b>	Yellow	<b>YouTube</b> REPEAT A-B	Yellow / YouTube / Repeat
<b>BLU</b>	Blue	<b>Prime Video</b> RANDOM	Blue / Prime Video / Random
<b>TEXT</b>	Text	<b>GOTO</b> TEXT	Text / Goto
<b>T.OPT</b>	T.Opt	<b>SHIFT</b> + <b>OPT-TOOLS</b> SETUP	Shift + Setup / OPT / Tools
<b>SUBTITLE</b>	Subtitle	<b>EQ</b> SUBTITLE	Subtitle / EQ
<b>STOP</b>	Stop	<b>HOLD</b> STOP	Stop / Hold
<b>PLAY</b>	Play	<b>SLOW</b> PLAY	Play / Slow
<b>PAUSE</b>	Pause	<b>STEP - FREEZE</b> PAUSE	Pause / Step / Freeze
<b>LEFT</b>	<<	<b>TUNE-</b> LEFT	<< / Tune-
<b>RIGHT</b>	>>	<b>TUNE+</b> RIGHT	>> / Tune+
<b>SIMPLINK</b>	Simplink	<b>MEDIA</b> DISPLAY	Display / Media
<b>AD</b>	AD	<b>LANG I/II</b> AUDIO	Audio / Lang I/II
<b>REC</b>	Rec	<b>REC MODE</b> REC	Rec / Rec Mode
<b>MY APPS</b>	My APPS	<b>SHIFT</b> + <b>APP</b> REPEAT	Shift + Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung