

Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject / Open/Close		Eject
	CD/DVD	+	Shift + 1
	VCR	+	Shift + 2
	FM/AM	+	Shift + 3
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	Program		Sleep

Originalfernbedienung Ersatzfernbedienung




 




	Clear		Exit
	Sound Mode	+	Shift + Dual
	Audio		Dual
	Show View		Media
	RDS		List
	Display / CLK/CNT		Info
	Setup / i		Options
	Setup / i		Menu
	Up / PR/TRK + / Preset +		Up
	Up / PR/TRK + / Preset +		Ch +
	Left / Tuning -		Left
	Right / Tuning +		Right
	OK / Memory /		Ok
	Down / PR/TRK - / Preset -		Down
	Down / PR/TRK - / Preset -		Ch -
	Return		Back
	Disc Menu		D. Menu















 






 

 






 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	Program		Sleep
	Clear		Exit
	O)/Audio		Dual
	ShowView		Media

Originalfernbedienung Ersatzfernbedienung

	Display/CLK/CN		3D
	i/Setup		Info
	Up		Up
	PR/TRK+		Ch +
	PR/TRK-		Ch -
	Down		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	Return		Back
	Disc Menu		D. Menu
	Rec/ITR		Rec
	I<<		I<<
	<<		<<
	>>		>>
	>>I		>>I
	Stop		Stop



