
 
 


 
 
 
 



 



 

 

 



 

 
 

 
 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power ON/Off		Power	
Mute		Mute	
Every Pop		Dual	
Tape 1 Stop		Stop	
Tape 1 Preset		Options	
Vol Rs-/Effect		Subt	
Sleep		Sleep	
Preset Pause		Pause	
CD Random		TV/R	
Tape 2 Pre./eq		3D	
Vol Rs+/S.Mode		Eject	
Input/Source		AV	
CD/Theater		Menu	
CD Play		Up	
Display		Info	
CD Rewind		Left	
Stop		Ok	
CD F.FWD		Right	
Funct./Direct		D. Menu	
CD Pause		Down	
Woofer/Speed		Back	
Volume+		Vol +	
Next/Prog+		Ch +	
Volume-		Vol -	
Tape 1 Hall/Ats		List	
Prev./Prog-		Ch -	
Mode		Guide	
Program		Pre Ch	
Tape 1 Rec		Rec	
Tape 1 F.FWD		>>	
Tape 1 Rew		<<	
Tape 1 Play		Play	

