



Originalfernbedienung **Ersatzfernbedienung**

	Standby / On		Power
	Function		Setup / OPT /
	Display		Display / Media
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Play / Pause		Pause / Step / Freeze
	Play / Pause		Play / Slow
	Folder Down		Down
	Folder Up		Up
	Stop		Stop / Hold
	Sleep / Timer		Sleep / Timer
	Sleep / Timer		Shift + Sleep / Timer
	CLK-ADJ / MEM		Smart / List
	Play Mode		Shift + Play /
	FIND / TS		D.Menu / Top
	DELETE / INFO		Shift + Info / Angle
	DELETE / INFO		Info / Angle

Originalfernbedienung **Ersatzfernbedienung**

	Volume-		Vol-
	Volume+		Vol+
	Preset EQ		Subtitle / EQ

