




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Mute		Mute
	Mode		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide
	Back		Back
	Nicam/A2		Dual

Originalfernbedienung Ersatzfernbedienung

	TXT/MIX		Text
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	>>/Index		>>
	<</Hold		<<
	I<<		I<<
	>>I		>>I
	Cancel		Exit
	Menu		Menu
	DTV/Radio		TV/R
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right







Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		Ok
	CH+		Ch +
	CH-		Ch -
	FAV		Pre Ch
	EPG		Guide
	Info		Info
	List		List
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Size		Format
	Reveal		3D
	Subtitle		Subt
	Subpage		AV
	FAV+		Shift + Ch +




 

 



 



 


 
Originalfernbedienung Ersatzfernbedienung

	FAV-		Shift + Ch -









 



 
 







Originalfernbedienung Ersatzfernbedienung

 
 
 








Power		Power
Mute		Mute
[I]/Menu		Menu
Exit		Exit
Source		AV
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Subtitle		Subt
Text		Text

Originalfernbedienung Ersatzfernbedienung

Vol+		Vol +
Vol-		Vol -
CH+		Ch +
CH-		Ch -
Up		Up
Down		Down
Right		Right
Left		Left
OK		Ok
Recall		Back
Info		Info
EPG		Guide
Freeze		Options
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Audio	 Dual		
I<</[≡+]	 I<<		
>>I/[≡..]	 >>I		
[≡i]	 Smart		
Play	 Play		
Pause	 Pause		
Stop	 Stop		
REP/Rec	 Rec		
<</[≡o]	 <<		
>>/[≡?]	 >>		
FAV	 Pre Ch		

