 

 

 


 

















 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Sleep		Sleep
	Nicam/A2		Dual
	Still		Pause
	16:9		Format
	NR.		Options
	Surround		List
	Picture		Shift + Format
	Tv/Av		AV
	Display		Info
	Sound		Shift + Dual
	Up		Up
	CH+		Ch +
	CH-		Ch -
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Left		Left
	Enter		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Pre Ch
	Red		Red




Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Cyan		Blue
	Index		D. Menu
	Cancel		Exit
	Subpage		Subt
	Size		Eject
	Hold		Stop
	Reveal		Menu
	PIP Window		Shift + Media
	PIP Position		Shift + Smart
	PIP Swap		Smart
	TXT/CC		Text
	PIP Size		Media
	PIP On/Off		Shift + Power

Originalfernbedienung Ersatzfernbedienung

