






 

















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|----------------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | -/-- |  | Shift + Guide / EPG / -/-- |
|  | Recall |  | Back / Return |
|  | P.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title |
|  | Sleep |  | Sleep / Timer |





 
Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-----------------------|
|  | Nicam |  | Audio / Lang I/II |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Source |  | AV / Input / RDS |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Display |  | Display / Media |
|  | Vol+ |  | Vol+ |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | List |  | Smart / List |
|  | FAV/List |  | Fav / Marker / PC |
|  | CH- |  | CH- / Page- |
|  | Tv/Radio |  | TV/Radio / |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|-------------------------------|
|  | EPG |  | Guide / EPG / -/-- |
|  | Aspect |  | Shift + Picture / Format |
|  | Freeze |  | Pause / Step / Freeze |
|  | Index |  | Info / Angle |
|  | Cancel |  | Shift + Exit / Cancel / Clear |
|  | Subpage |  | Subtitle / EQ |
|  | Text |  | Text / Goto |
|  | Reveal |  | D.Menu / Top |
|  | Size |  | Zoom / Size |
|  | Hold |  | Stop / Hold |
|  | Mix |  | Setup / OPT / |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Cyan |  | Blue / Prime Video / Random |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

