 


 

 







 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Tv/Radio		TV/R
	FAV		Pre Ch
	World/Internet		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	LIB		List
	P:P		AV

 


 

 



 
 
 

 








 

**Originalfernbedienung    Ersatzfernbedienung**

	Music/Photo/Cam		3D
	EPG		Guide
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Exit		Exit
	Info		Info
	Back		Back
	Menu		Menu
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Stop		Stop
	Play		Play





Originalfernbedienung    Ersatzfernbedienung

	Rec		Rec
	Pause		Pause
	>>		>>
	<<		<<
	Text		Text
	Subt.		Subt
	Audio		Dual
	OPT		Options
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung    Ersatzfernbedienung