 



 

 

 



 

 



 





 





 
 








 

 







 









 

 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Fav / Marker / PC
	Info		Info / Angle
	Menu		Menu / Home
	Back		Back / Return
	EPG		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Right		Right
	Vol+		Vol+
	Vol-		Vol-
	Left		Left
	OK		OK
	Tv/Rad		TV/Radio /
	Page Up		CH+ / Page+
	Page Down		CH- / Page-
	HDMI/RES		Shift + 0
	HDMI/RES		AV / Input / RDS
	Ratio		Picture / Format
	Red		Red / Netflix / Search
	SOS		D.Menu / Top
	SUB		Subtitle / EQ



