
 


 



 

 


 
 











 
 

 


 
 












 

 

 

 

 
 
 
 
 




| Originalfernbedienung | Ersatzfernbedienung   | Originalfernbedienung | Ersatzfernbedienung   |
|-----------------------|---|-----------------------|---|
| POWER                 |    | 6                     |    |
| SOURCE                |    | 7                     |    |
| EXIT                  |    | 8                     |    |
| MENU                  |    | 9                     |    |
| MUTE                  |    | 0                     |    |
| Q. MENU               |    | EPG                   |    |
| TEXT                  |    | FOLDER                |    |
| OK                    |    | V+                    |    |
| UP                    |    | V-                    |    |
| DOWN                  |    | P+                    |    |
| RIGHT                 |   | P-                    |   |
| LEFT                  |  | SLEEP                 |  |
| 1                     |  | BACK                  |  |
| 2                     |  | PRESETS               |  |
| 3                     |  | SUB / LANG.           |  |
| 4                     |  | RED / ZOOM            |  |
| 5                     |  | GREEN /               |  |



| Originalfernbedienung | Ersatzfernbedienung   | Originalfernbedienung | Ersatzfernbedienung   |
|-----------------------|---|-----------------------|---|
| YELLOW / ROOT         |  Yellow  | > < / SIZE            |  3D  |
| BLUE / TITLE          |  +  Shift + Blue      | INTERNET              |  +  Shift + Smart |
| SKIP PREV.            |  I<<   | RECALL                |  Pre Ch  |
| SKIP NEXT             |  >>I   | i                     |  Info  |
| STOP                  |  Stop  | NETFLIX               |  Smart   |
| PAUSE                 |  Pause   |                       |   |
| REC                   |  Rec   |                       |   |
| REW                   |  <<  |                       |   |
| PLAY                  |  Play  |                       |   |
| BLUE                  |  Blue   |                       |   |
|                       |  +  Shift + Menu  |                       |   |
| FAV/SEARCH/1          |  +  Shift + 1     |                       |   |
| FAV/DISC/2            |  +  Shift + 2     |                       |   |
| YOUTUBE               |  Media   |                       |   |
| TV                    |  TV/R  |                       |   |
| SUBTITLE              |  Subt  |                       |   |
| MULTIMEDIA            |  +  Shift + Media |                       |   |

