





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Info		Info
	Text		Text
	Source		AV
	Recall		Back

**Originalfernbedienung Ersatzfernbedienung**

	Sleep		Sleep
	EPG / Guide		Guide
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Aspect		Eject
	P.Mode		Format
	S.Mode	 + 	Shift + Dual
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Subt		Subt



