
 



 




 

 


 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Audio		Audio / Lang I/II
	Mute		Mute / Dimmer
	Tv/R		TV/Radio /
	Sub-T		Subtitle / EQ
	EPG		Guide / EPG / -/--
	Text		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Favor		Fav / Marker / PC







 















Originalfernbedienung Ersatzfernbedienung

	0		0
	Last		Back / Return
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	CH+		CH+ / Page+
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Info		Info / Angle
	CH-		CH- / Page-
	Down		Down
	Mode		Smart / List
	PVR		Display / Media
	USB		Shift + 8





Originalfernbedienung **Ersatzfernbedienung**

	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Red		Red / Netflix / Search
	I<<		I<< / Preset-
	Yellow		Yellow / YouTube / Repeat
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Green		Green / APP / Repeat
	<<		<< / Tune-
	>>		>> / Tune+
	Blue		Blue / Prime Video / Random
	Rec		Rec / Rec Mode

Originalfernbedienung **Ersatzfernbedienung**

