




 


 


 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Sleep		Sleep / Timer
	0		0
	Recall		Back / Return
	Vol+		Vol+
	I/II		Audio / Lang I/II
	PR+		CH+ / Page+

**Originalfernbedienung Ersatzfernbedienung**

	Vol-		Vol-
	Input		AV / Input / RDS
	PR-		CH- / Page-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Favourite		Fav / Marker / PC
	FAV-		Shift + CH- /
	FAV+		Shift + CH+ /
	Info		Info / Angle
	P-Mode		Picture / Format
	S-Mode		Sound / Title
	ARC		Display / Media





Originalfernbedienung Ersatzfernbedienung

	EPG		Guide / EPG / -/--
	Text		Text / Goto
	Mix		Shift + Text /
	Size		Zoom / Size
	Reveal		D.Menu / Top
	Hold		Stop / Hold
	Index		Smart / List
	S.Page		Eject / Surround
	S.TITL		Subtitle / EQ
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung




 





 















Originalfernbedienung Ersatzfernbedienung

Update	 + 	Shift + D.Menu / Top Menu
Aft/Caf	 + 	Shift + AV / Input / RDS
Reveal		Setup / OPT /
Off/Tim		Eject / Surround
Game Coo		Smart / List
2.Fav P/C 2.		Fav / Marker / PC
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--














Originalfernbedienung Ersatzfernbedienung

0/10		0
Menu audio		Audio / Lang I/II
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Color+ P.Std		Picture / Format
Color- S.Std		Sound / Title
Audio+	 + 	Shift + Vol+
Tune-		<< / Tune-
Tune+		>> / Tune+
Menu		Menu / Home
Mute		Mute / Dimmer
Info		Info / Angle
Subt.List		Subtitle / EQ
Txt Stop		Stop / Hold
Sleep Timer		Sleep / Timer





**Originalfernbedienung Ersatzfernbedienung**

Return TV		TV/Radio /
Menu video		D.Menu / Top
Text		Text / Goto
Txt Expand		Zoom / Size
TV/AV		AV / Input / RDS
On/Off		Power
Menu Up		Up
Display		Display / Media
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Off		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-

**Originalfernbedienung Ersatzfernbedienung**