

 
 
 



 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 

 
 



 












 
 
 

 

 




 

 
 
 
 
 


 
 

 
 
 
 




 
 
 

 
 
 





 

 





 
 

 
 

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Info		Info
	3D		3D
	ANT		D. Menu
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Reveal / Source		AV
	Audio I/II		Dual
	CH +		Ch +
	CH -		Ch -
	Index		Media
	FAV		Pre Ch
	Vol +		Vol +
	Vol -		Vol -
	Menu		Menu
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	List / Repeat		List
	List / Repeat		Shift + Text
	EPG		Guide
	www		Smart




Originalfernbedienung Ersatzfernbedienung

	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<
	>>		>>
	Aspect / Size		Format
	[≡o] / Subtitle		Subt
	T-Shift		Options
	Recall		Back
	Red		Red
	Green		Green
	Yellow / I<<		Yellow
	Yellow / I<<		I<<
	Blue / >>I		Blue
	Blue / >>I		>>I
	Text		Text

Originalfernbedienung Ersatzfernbedienung

	Still		Shift + Stop
	Radio		TV/R
	[≡X]		Shift + Exit

