


 




Originalfernbedienung Ersatzfernbedienung

	SRC		AV
	BND Disc Up		Smart
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Search >>I		>>I
	I<< Search		I<<
	Play/Pause		Ok
	Play		Play
	Pause		Pause
	TA		Options
	Disp		Info
	PS/AS/SCN		Media

Originalfernbedienung Ersatzfernbedienung

	AF/RPT		Text
	PTY/RDM/TV/VT		TV/R

