








 
 
 
 

 
 

 




 




 

 




 
 


 
 
 





Originalfernbedienung Ersatzfernbedienung

 







 









 
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	HD		Media
	VOD		Smart
	Guide		Guide
	Up		Up
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Right		Right
	Down		Down
	Retour		Back
	Quitter		Exit
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	↑		Shift + Ch +
	↓		Shift + Ch -
	Ch+		Ch +
	Ch-		Ch -
	Menu		Menu
	Radio		TV/R
	Red		Red
	Green		Green
	Yellow / Fav		Yellow





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Yellow / Fav	 Pre Ch		
 Blue / Text	 Blue		
 Blue / Text	 Text		
 <<	 <<		
 Stop	 Stop		
 Pause / Play	 Play		
 Pause / Play	 Pause		
 >>	 >>		
 Rec	 Rec		
 Rec TV	 List		

