



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	TV/SAT		Smart / List
	4		4
	5		5
	6		6
	Radio		TV/Radio /
	7		7
	8		8
	9		9
	Mute		Mute / Dimmer
	0		0
	Red / i		Info / Angle
	Red / i		Red / Netflix / Search
	Green / Audio		Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

	Green / Audio		Audio / Lang I/II
	Yellow / Subtitle		Yellow / YouTube / Repeat
	Yellow / Subtitle		Subtitle / EQ
	Menu		Menu / Home
	Blue / UHF		Blue / Prime Video / Random
	Up		Up
	White / Timer		Sleep / Timer
	White / Timer		Fav / Marker / PC
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	V+		Vol+
	P+		CH+ / Page+
	V-		Vol-
	?		D.Menu / Top





**Originalfernbedienung    Ersatzfernbedienung**

EPG	EPG	GUIDE EPG	Guide / EPG / -/--
P-	P-	CH PAGE	CH- / Page-
RCL	RCL	MEDIA DISPLAY	Display / Media

**Originalfernbedienung    Ersatzfernbedienung**


