













































 

 



 


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	PR+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	E		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	PR-		CH- / Page-
	[]		Subtitle / EQ
	Input		AV / Input / RDS
	Menu		Menu / Home
	1		1
	2		2
	3		3
	4		4

Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	Sleep		Sleep / Timer
	0		0
	Mute		Mute / Dimmer
	Normal		Smart / List
	Recall		Back / Return
	System		D.Menu / Top

