



 

 



 

 





















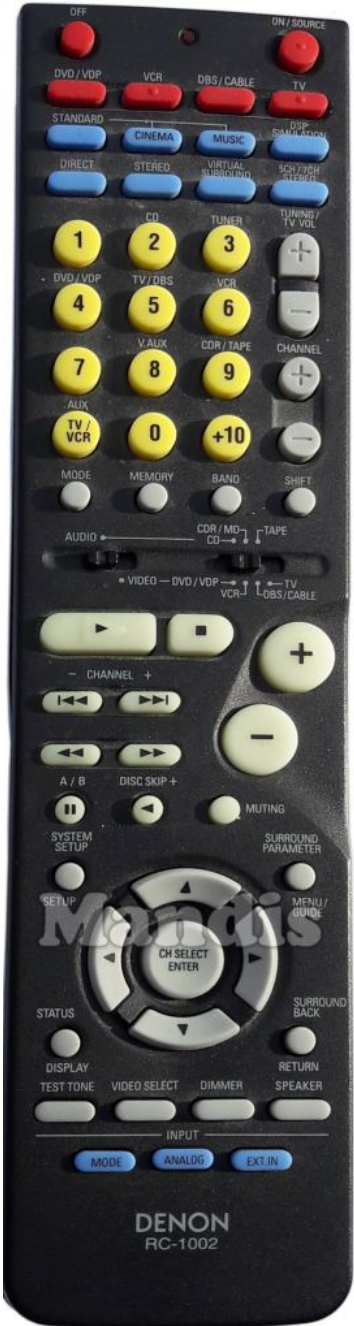 
Originalfernbedienung Ersatzfernbedienung

	OFF		Shift + Power
	ON		Power
	Standard		Red / Netflix / Search
	Cinema		Green / APP / Repeat
	Music		Yellow / YouTube / Repeat
	DSP Simulation		Blue / Prime Video / Random
	Direct		Shift + Red / Netflix /
	Stereo		Shift + Green / APP /
	Virtual Surround		Shift + Yellow / YouTube /
	5CH/7CH Stereo		Shift + Blue / Prime
	Input PHONO		0
	Input CD		3
	Input TUNER		6
	Tuning+		>> / Tune+
	Input DVD/VDP		2
	Input TV/DBS		1
	Input VCR		4

Originalfernbedienung Ersatzfernbedienung

	Tuning-		<< / Tune-
	Input VCR-2		9
	Input V.AUX		8
	Input CDR/TAPE		5
	Channel+ /		>> / Preset+
	Channel+ /		CH+ / Page+
	Input AUX		7
	Channel- / Preset-		<< / Preset-
	Channel- / Preset-		CH- / Page-
	Mode		Play / Slow
	Memory		Pause / Step / Freeze
	Band		Stop / Hold
	Shift		Rec / Rec Mode
	Vol+		Vol+
	Vol-		Vol-
	Muting		Mute / Dimmer
	Setup		Setup / OPT /





Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Surround		Eject / Surround
	Left		Left
	Enter		OK
	Right		Right
	Status / Display		Display / Media
	Down		Down
	Surround Back		Back / Return
	Test Tone		Text / Goto
	Video Select		Picture / Format
	Dimmer	+	Shift + Mute / Dimmer
	Speaker		Sound / Title
	Input Mode	+	Shift + 1
	Input Analog	+	Shift + 2
	Input Ext.In	+	Shift + 3

Originalfernbedienung Ersatzfernbedienung

