


 


 


 








 





 


 


 
 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|--------|
|  | DVD Power |  | Power |
|  | Open/Close |  | Eject |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | +10 |  | Guide |
|  | Prog/Direct |  | Sleep |
|  | Call |  | Pre Ch |
|  | Clear |  | Exit |
|  | Random |  | Media |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------------|
|  | Subtitle |  | Subt |
|  | Audio |  | Dual |
|  | Repeat |  | Text |
|  | A-B Repeat |  | AV |
|  | Menu |  | Menu |
|  | Top Menu/PBC |  | Shift + Menu |
|  | Angle |  | Red |
|  | Return |  | Back |
|  | Up |  | Up |
|  | Enter |  | Ok |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Display |  | Info |
|  | Stop |  | Stop |
|  | Still/Pause |  | Pause |
|  | Play |  | Play |



