






































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	*(Left)		Shift + Left
	0		0
	*(Right)		Shift + Right
	[]/Picture		Picture / Format
	/j/Sound		Sound / Title
	I-II		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Up/PR+		Up
	PR+		CH+ / Page+
	List		Smart / List
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Sleep		Sleep / Timer
	Down/PR-		Down
	PR-		CH- / Page-
	P<P		Back / Return
	Tv/AV		AV / Input / RDS
	Tv/PC		TV/Radio /
	[<>]/ARC		Shift + Picture / Format
	Red		Red / Netflix / Search



