


 




**Originalfernbedienung Ersatzfernbedienung**

PWR On/Off		Power
Mute		Mute
Info		Info
Sleep Timer		Sleep
TV		Smart
Video		AV
Text		Text
Menu		Menu
Display	 +  Shift + Info	
Menu Up		Up
Menu Down		Down
Menu Right		Right
Menu Left		Left
OK Enter		Ok
Exit		Exit
Volume+		Vol +
Volume-		Vol -

**Originalfernbedienung Ersatzfernbedienung**

CH/Page+		Ch +
Audio		Dual
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide
0/10		0
FAV Pref.		Pre Ch
Red		Red
Green		Green



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Yellow			Yellow
Blue			Blue
Freeze			3D
Dec/Pause			Pause
Help			D. Menu
East			Options
Lang./Rewind			<<
Radio			TV/R
H/V Play			Play
LNB F.Forward			>>

