









 

 



 

 

 

 

 

 



 

 







**Originalfernbedienung    Ersatzfernbedienung**











 

 













 

 











	Power		Power
	Timer		Sleep / Timer
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Recall		Back / Return
	PM		Smart / List
	Info		Info / Angle

**Originalfernbedienung    Ersatzfernbedienung**




 


 

	Input		AV / Input / RDS
	Audio		Audio / Lang I/II
	Up / CH+		CH+ / Page+
	Up / CH+		Up
	Left / Vol-		Vol-
	Left / Vol-		Left
	Menu		Menu / Home
	Right / Vol+ / Enter		Right
	Right / Vol+ / Enter		Vol+
	Right / Vol+ / Enter		OK
	[ + ]		>> / Tune+
	Down / CH-		CH- / Page-
	Down / CH-		Down
	=>1		>>  / Preset+
	[ - ]		<< / Tune-
	1<=		l<< / Preset-
	Red / EPG		Red / Netflix / Search




**Originalfernbedienung    Ersatzfernbedienung**

	Red / EPG	 + 	Shift + Guide / EPG / -/--
	Green / Fav		Green / APP / Repeat
	Green / Fav		Fav / Marker / PC
	Yellow / Digest		Yellow / YouTube / Repeat
	Blue / Pause		Blue / Prime Video / Random
	Blue / Pause		Pause / Step / Freeze
	Info / Reveal	 + 	Shift + Info / Angle
	Up / Size	 + 	Shift + Up
	Up / Size		Zoom / Size
	Subtitle / Stop		Stop / Hold
	Subtitle / Stop		Subtitle / EQ
	4:3/16:9		Picture / Format
	Left / Index	 + 	Shift + Left
	Menu Red	 + 	Shift + Menu /
	Right / Sub.Pg	 + 	Shift + Right
	TTX On/Off/Mix		Text / Goto
	Radio		TV/Radio /

**Originalfernbedienung    Ersatzfernbedienung**

	Down Red	 + 	Shift + Down
	Enter Red	 + 	Shift + OK
	Exit		Exit / Cancel / Clear

