 



 






 

 


 











 

 







Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	Audio		Audio / Lang I/II
	TV / R		TV/Radio /
	Sleep		Sleep / Timer
	SUB		Subtitle / EQ
	TXT		Text / Goto
	YouTube		Shift + Yellow / YouTube /
	Recall		Back / Return
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	PGUP		Shift + CH+ /
	0		0
	FAV +		Shift + Up
	PGDN		Shift + CH- /
	SAT		Shift + 0
	FAV -		Shift + Down
	Up / CH +		Up
	Up / CH +		CH+ / Page+
	FAV		Fav / Marker / PC
	Left / Vol -		Left
	Left / Vol -		Vol-
	OK		OK
	Right / Vol +		Vol+
	Right / Vol +		Right
	Menu		Menu / Home
	Down / CH -		Down





Originalfernbedienung Ersatzfernbedienung

	Down / CH -		CH- / Page-
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Zoom		Zoom / Size
	Edit		D.Menu / Top
	Info		Info / Angle
	USB		Shift + 8
	MP3		Display / Media
	JPEG		Picture / Format
	PVR List		Smart / List
	Goto		Shift + Text /
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-

Originalfernbedienung Ersatzfernbedienung

	>>		>> / Tune+
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	>>I		>>I / Preset+

