



 

 

 


 
 

 
 






 
 
 

 


 
 







Originalfernbedienung	Ersatzfernbedienung
 DVD / TV / AV	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Mute	 Mute
 Repeat / TV/Radio	 TV/R
 Repeat / TV/Radio	 Shift + Text
 Exit	 Exit
 Up / CH+	 Up
 Up / CH+	 Ch +

Originalfernbedienung	Ersatzfernbedienung
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 Pg Up	 Shift + Ch +
 Pg Dn	 Shift + Ch -
 Title	 Smart
 Info	 Info
 Goto / FAV	 Pre Ch
 Audio	 Dual
 Sub-T	 Subt
 Zoom / TTX	 Text
 Zoom / TTX	 Eject
 Setup	 Options





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Menu / EPG	Menu		
Menu / EPG	Guide		
USB	Media		
Play / Pause	Play		
Play / Pause	Pause		
Stop	Stop		
Copy/Delete / Rec	Rec		
Red / <<	Red		
Red / <<	<<		
Green / >>	Green		
Green / >>	>>		
Yellow / I<<	Yellow		
Yellow / I<<	I<<		
Blue / >>I	>>I		
Blue / >>I	Blue		

Originalfernbedienung	Ersatzfernbedienung

