















 







 


 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	I<		I<<
	>I		>>I
	Back		Back
	Info		Info
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Exit		Exit
	EPG		Guide
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	File List		List
	CH+ / Page+		Ch +
	CH- / Page-		Ch -
	Text		Text
	Audio		Dual
	Subtitle		Subt
	TV		TV/R
	Portal		Smart



